

HOME DECORATORS

collection


MADISON LIFT-TOP STORAGE BENCH 36"W

Assembly Instructions

IDC #: 78259 MFG#: MD0011-M

Please read over the instructions; it will be a time saver in the long run.

Note: Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

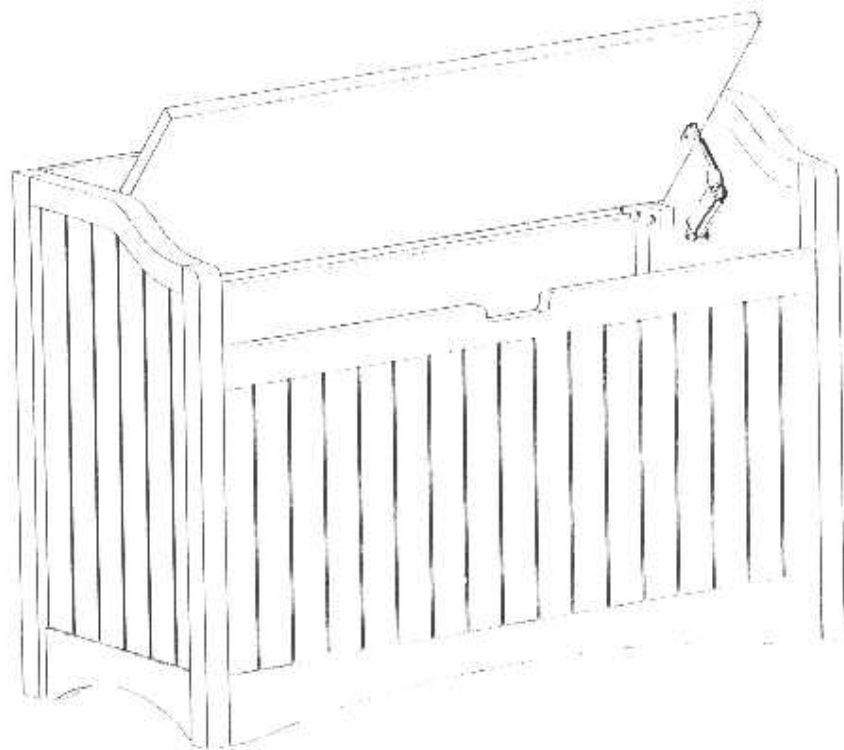

Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.



(1) Top Panel 1




(2) Bottom Panel 1



(3) Left Side Panel 1



(4) Right Side Panel 1

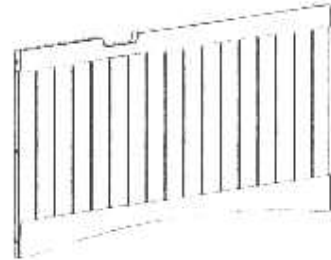

(5) Front Panel 1



(6) Back Panel 1



(7) Backboard 1

Hardware Check List

Please take all hardware out of the hardware bag.

A



Cam Bolt-15

G



Allen Bolt-3 ($\phi 1/4" \times 1"$)

B



Cam Lock-15

H



Lock Washer-3 ($\phi 1/4"$)

C



Cover-15

I



Flat Washer-3 ($\phi 1/4" \times 160$)

D




Allen Wrench-1 ($\phi 1/4"$)

J



Round Head Screw-16 (#6 \times 14mm)

E

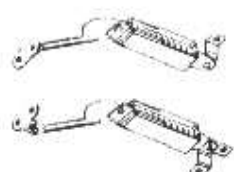

Right Safety Hinge-2(1,3,4)

K



Wood Dowel-10 ($\phi 8 \times 30$ mm)

F



Flat Head Screw-8 (#6 \times 14mm)

L




Glue-1 (25g)

When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not to over tighten the Cam-bolt, this can cause damage.




How to use Cam Locks




Cam locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam lock may break the cam-lock.

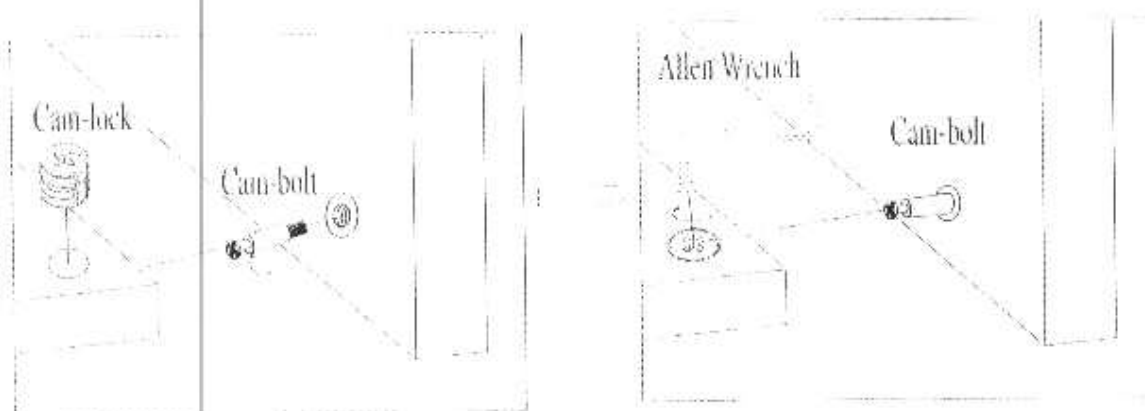


Fill hole 1/4 inch of Glue (L) to the wood dowel hole in Top Panel (1) and Bottom Panel (2) and Front Panel (5) and Backboard (7), then insert Wood dowels (K).

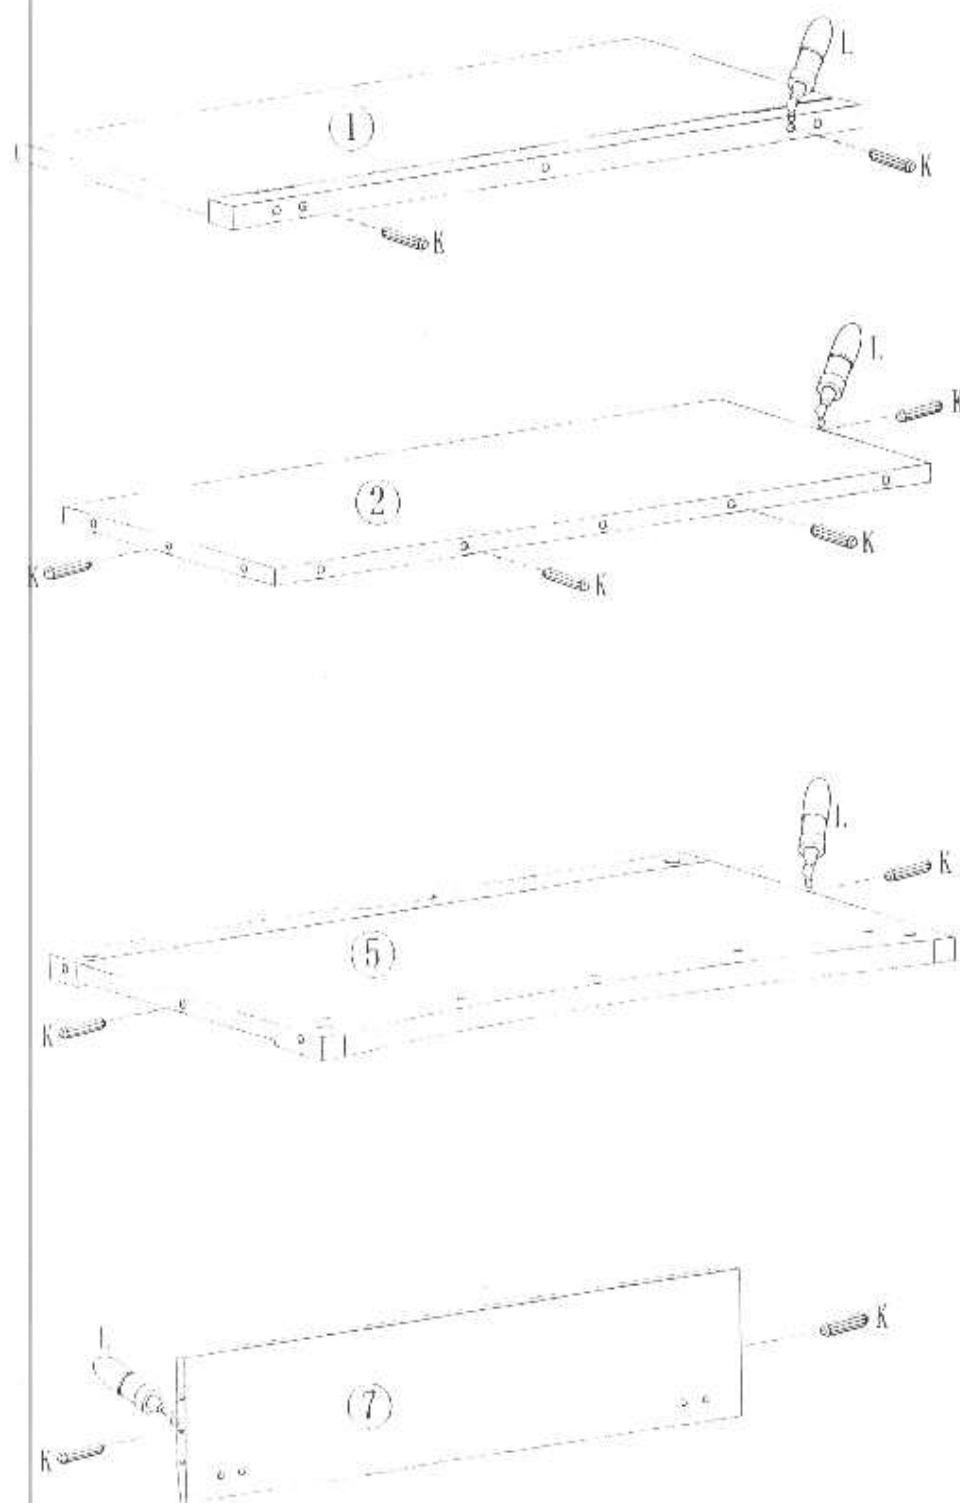


2. Screw Cam bolts (A) clockwise into the threaded holes in Side panel (3&4) and Front panel (5).

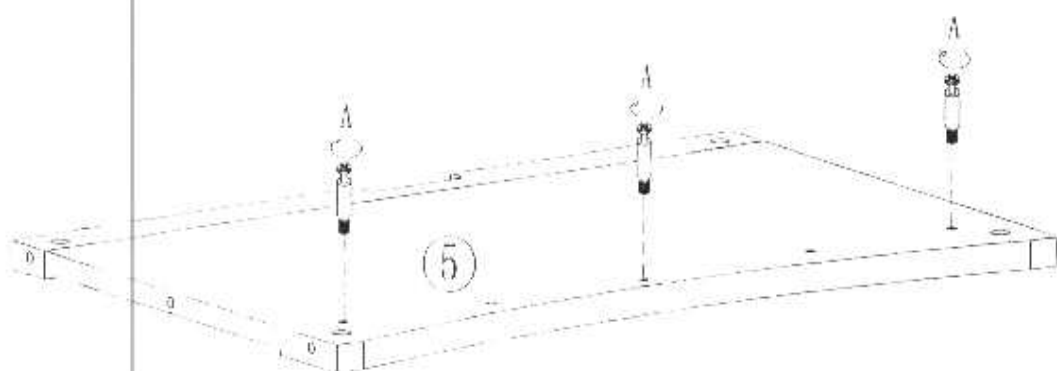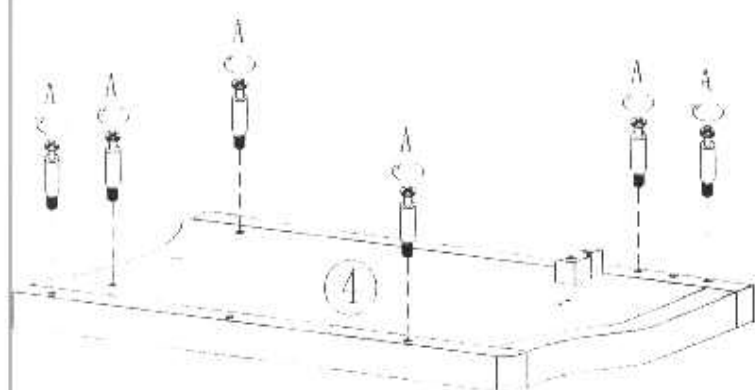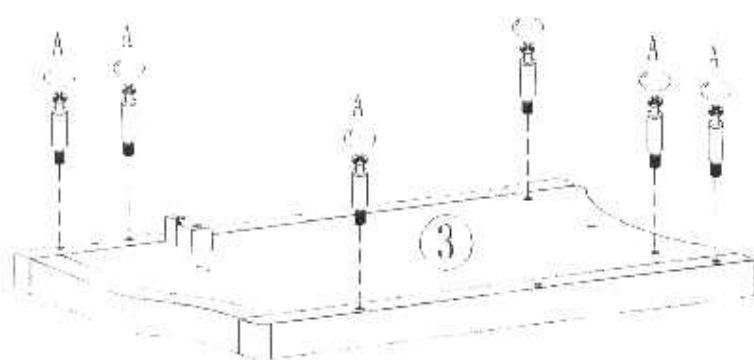


3. Attach Side Panel (3&4) to backboard(1) and Bottom panel(2) and Front panel(5) , with cam loc(B) by Flat head wrench(D), Cover all cam lock(B) with cover(C), and in Allen Bolt(G), Lock Washer (I), Flat Washer (H) to backboard and top Panel back Crossbar, by Allen Wrench(D) screw down.

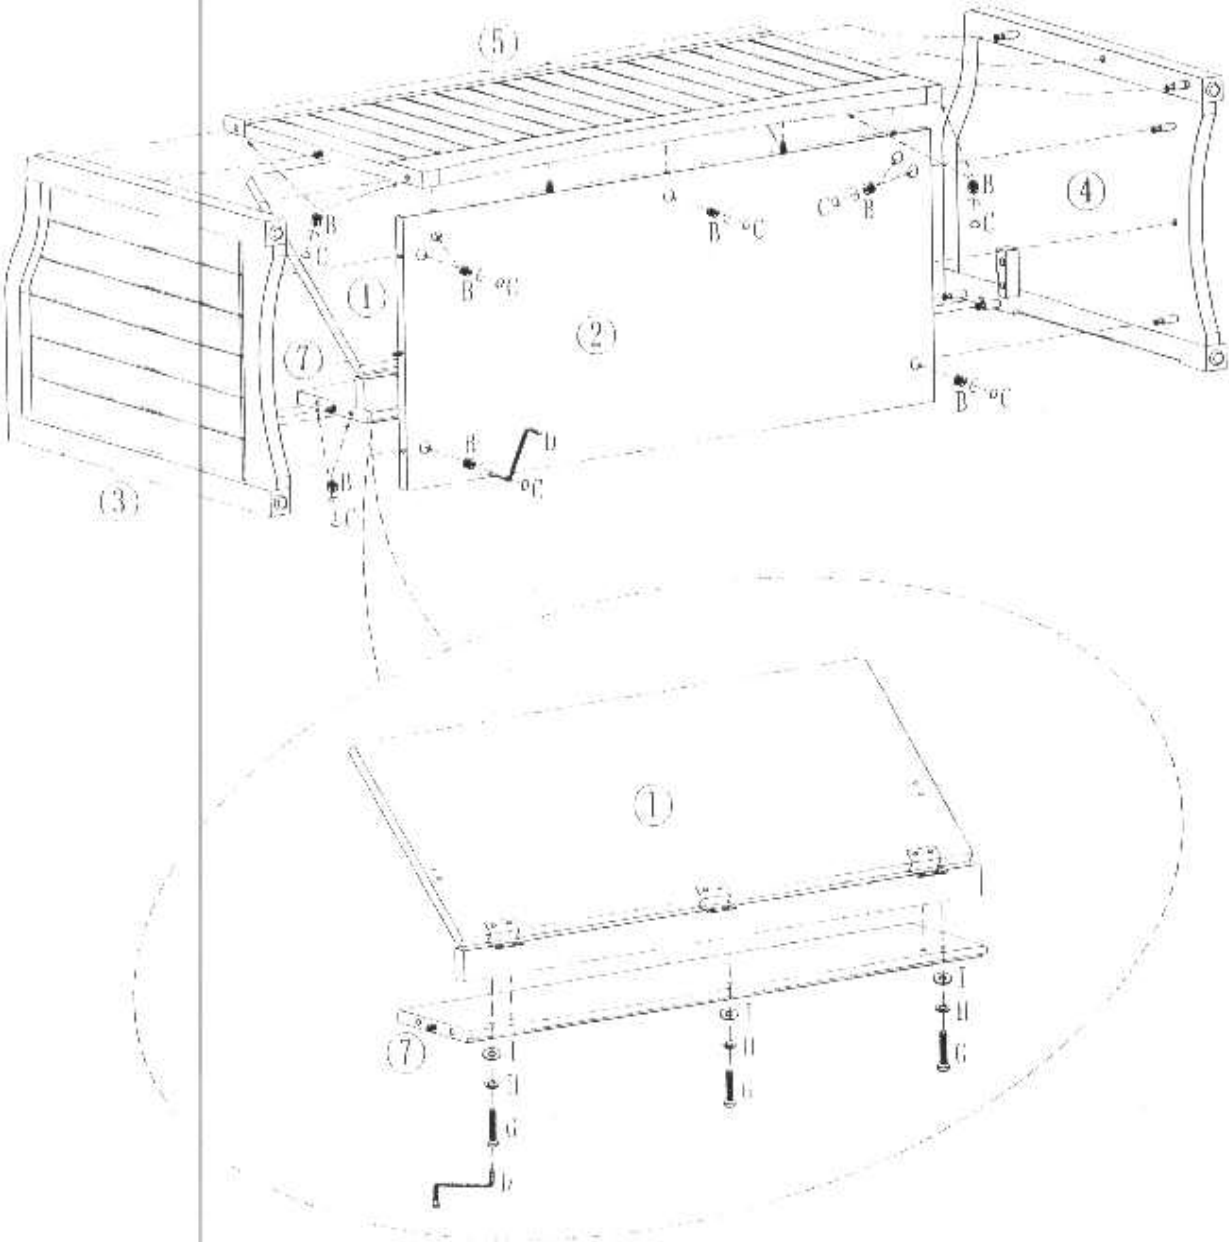

4. Attach Long Hinge 2 (B) to Top Panel (1) and Side Panel (4) by Short Flat Screw (F) by screwdriver. Repeat next install.

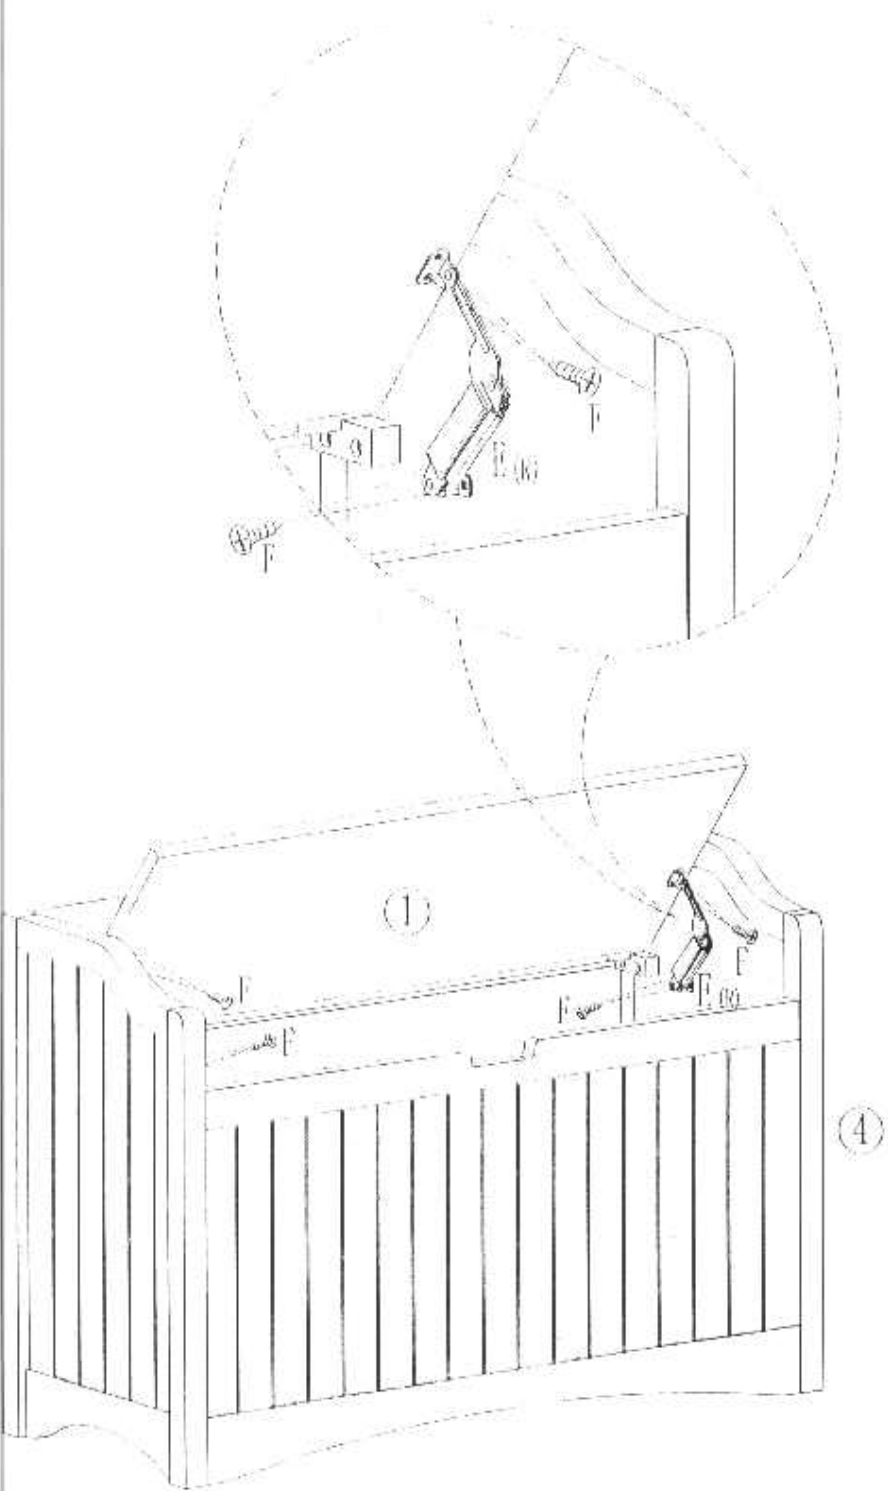

3. Adjust so the space around drawer are even and then Tighten Upper Back Panel (6) of cabinet with Round Head Screw (f) as illustrated.

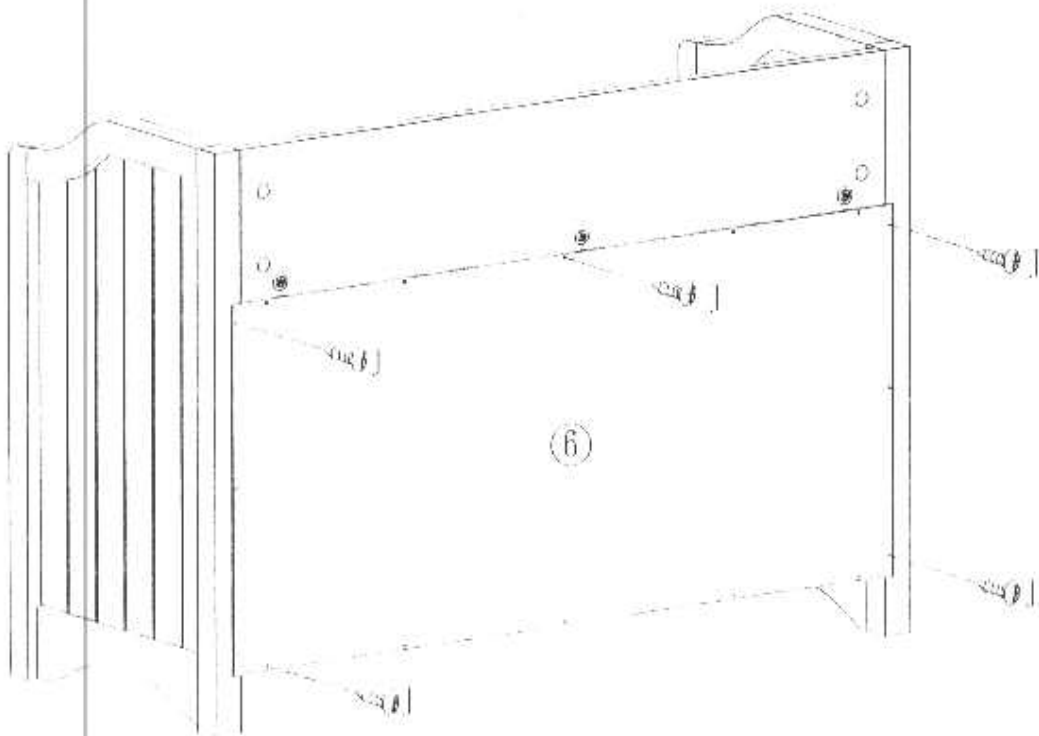

THE ASSEMBLY IS COMPLETE NOW.

